



















QUICK REFERENCE

 : (+) button

 : (−) button

 : Center button

Type	Operation	Button	Duration
Basic operations	Power on	 & 	Press for 1 second
	Power off	 & 	Single tap
	Volume up/down	 or 	Single tap
Phone	Answer phone call		Single tap
	End phone call		Press for 2 seconds
	Reject phone call		Press for 2 seconds
	Activate voice assistant		Press for 3 seconds
	Speed dial		Press for 3 seconds
	Play/Pause music		Press for 1 second
	Track forward/back	 or 	Press for 1 second
Bluetooth Intercom	Intercom pairing		Press for 5 seconds
	Start/end intercom		Single tap
Configuration menu			Press for 10 seconds