
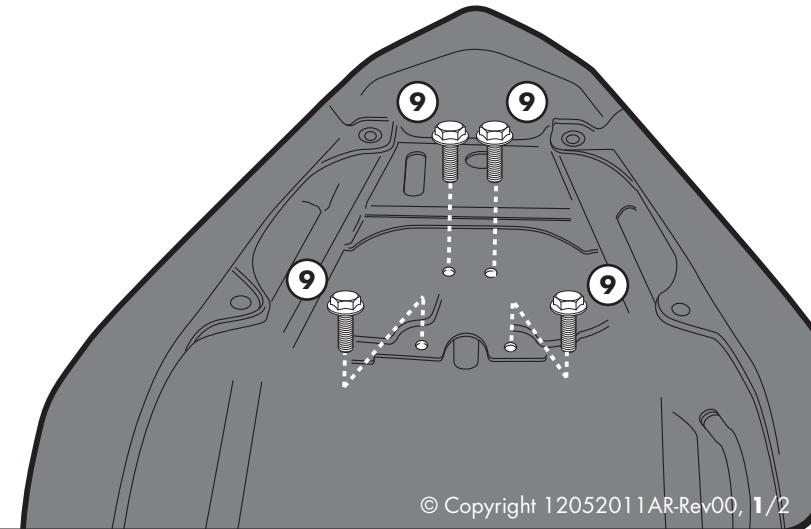
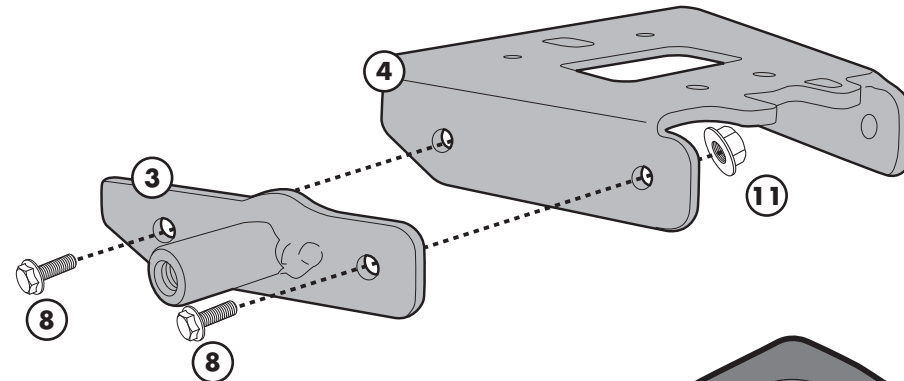
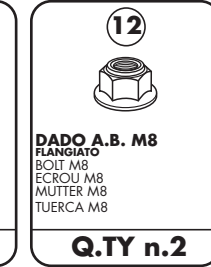
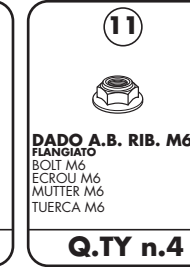
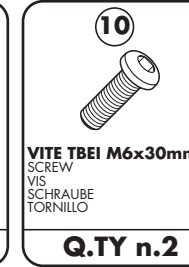
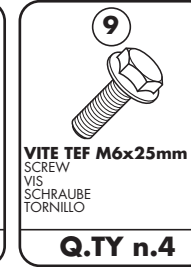
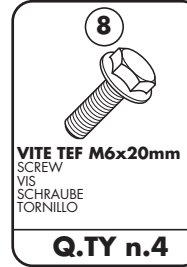
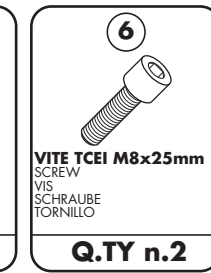
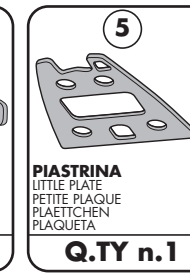
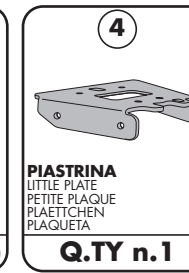
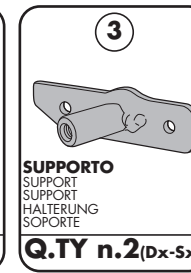
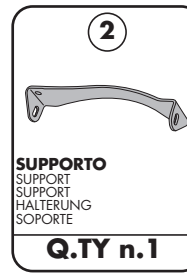
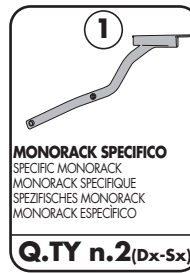


MONORACK SPECIFICO - SPECIFIC MONORACK  
MONORACK SPECIFIQUE - SPEZIFISCHES MONORACK - MONORACK ESPECÍFICO

# HONDA HORNET 600

## 2011

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

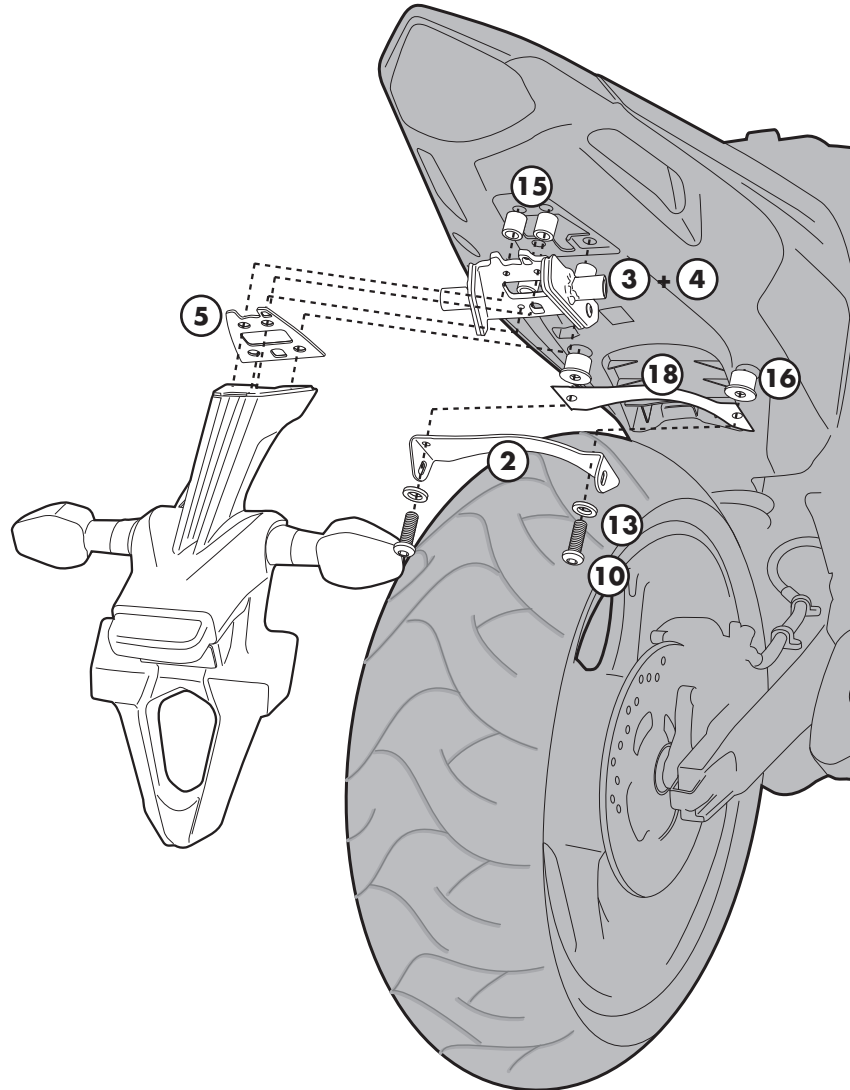

MONORACK SPECIFICO - SPECIFIC MONORACK  
MONORACK SPECIFIQUE - SPEZIFISCHES MONORACK - MONORACK ESPECÍFICO

# HONDA HORNET 600

## 2011

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

13



**RONDELLA Ø6mm**  
WASHER  
RONDELLE  
SCHEIBE  
ARANDELA

**Q.TY n.2**

14



**DISTANZIALE Ø16x4mm**  
Foro Ø8mm, V004  
SPACER  
ENTRETOISE  
DISTANZSTUECK  
DISTANCIADOR

**Q.TY n.2**

15



**DISTANZIALE Ø12x5.5mm**  
Foro Ø6,5mm, V704  
SPACER  
ENTRETOISE  
DISTANZSTUECK  
DISTANCIADOR

**Q.TY n.4**

16



**DISTANZIALE V814**  
SPACER  
ENTRETOISE  
DISTANZSTUECK  
DISTANCIADOR

**Q.TY n.2**

17



**COPRIVITE Ø8mm**  
Z801  
SCREW CAP  
CACHE VIS  
STOPSSCHRAUBE  
TAPA TORNILLO

**Q.TY n.4**

18

**Z2121**  
PROTEZIONE ADESIVA  
ADHESIVE PROTECTION  
PROTECTION ADHESIVE  
SCHUTZKLEBER  
PROTECCIÓN ADHESIVA

**Q.TY n.1**

