

## QUICK-LOCK EVO-Kofferträger Adapterkit Krauser QUICK-LOCK EVO Side Carrier Adapter Kit Krauser

### Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

<b>M6</b>	<b>9,6 Nm</b>
<b>M8</b>	<b>23 Nm</b>

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

SW-MOTECH GmbH & Co. KG  
Ernteweg 8/10  
35282 Rauschenberg  
Germany

Tel. +49 (0) 64 25/8 16 8-00  
Fax +49 (0) 64 25/8 16 8-10

info@sw-motech.com  
www.sw-motech.com

### Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW Motech takes no responsibility for damages caused by improper installation.

All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

<b>M6</b>	<b>9,6 Nm</b>
<b>M8</b>	<b>23 Nm</b>

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts and nuts.

#### 1 Adapterplatte KRAUSER Adapter Plate KRAUSER



KFT.00.152.011 **01**

Anzahl/ Pcs. 2

#### 2 Sechskantschraube Hexagon Screw



M8 x 25 DIN 933

Anzahl/ Pcs. 8

#### 4 Linsenkopfschraube Lenshead Screw



schwarz/black

M6 x 30 ISO 7380

Anzahl/ Pcs. 8

#### 3 Mutter mit Bund, selbstsichernd Lock Nut with Flange



schwarz/black

M8 DIN 6927

Anzahl/ Pcs. 8


#### 5 Mutter mit Bund, selbstsichernd Lock Nut with Flange



schwarz/black

M6 DIN 6927

Anzahl/ Pcs. 8

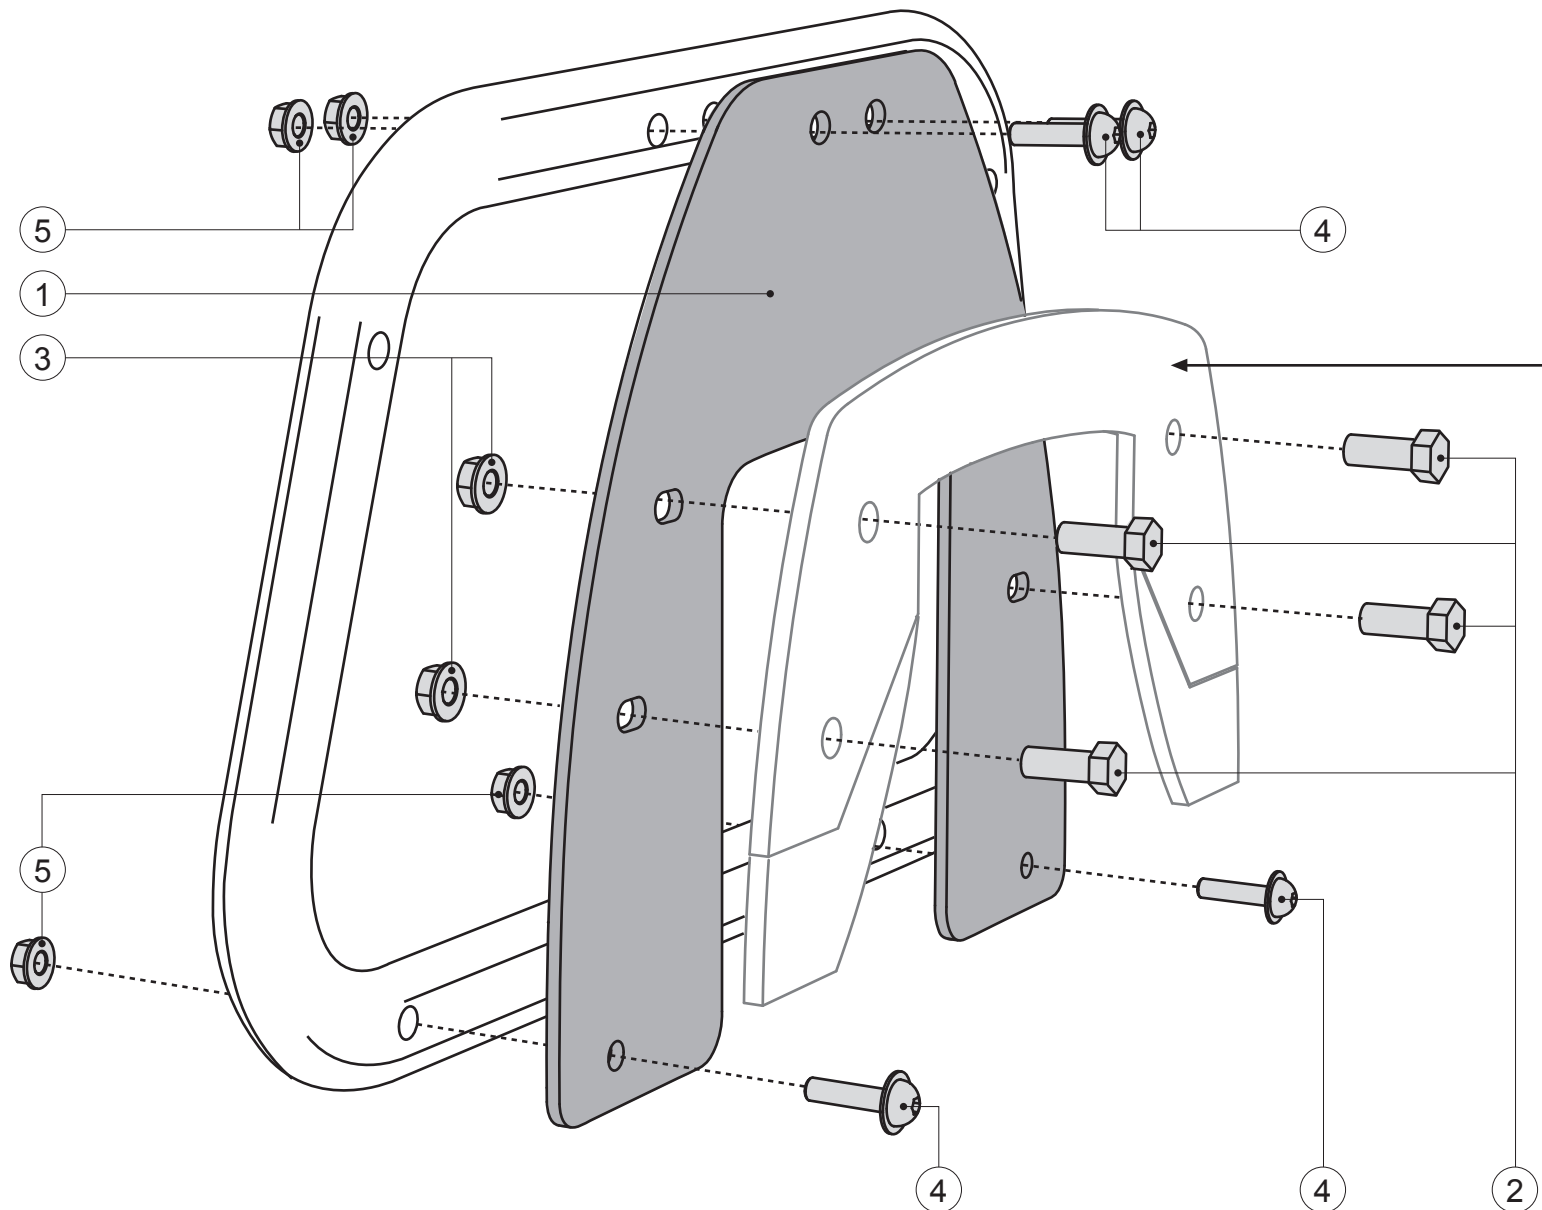

! Achtung: Nicht im Lieferumfang  
 • enthalten. Muss bei KRAUSER bestellt  
 werden.  
 Attention: Not included. Must be  
 ordered from KRAUSER.

← Fahrrichtung  
 Driving direction