


Item number: **SBL.01.070.10000/B**

Revision: **02** · Date: **05 - 2023**

## Crash bar

 ~ 1.5 h.

EASY      DIFFICULT

**ENGLISH** Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

**Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.**

**This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.**

**These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.**

### SAFETY WARNING SYMBOL

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words **DANGER**, **WARNING** or **CAUTION** are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

### GENERAL INFORMATION

 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.


 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. **IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!**

**PREPARATION:** Read the mounting instructions carefully and make sure that all parts on the parts list are available.

 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

**ASSEMBLY:** All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

**FUNCTIONAL CHECK:** After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



SW-MOTECH GmbH & Co. KG  
Ernteweg 7-10  
35282 Rauschenberg  
Germany



 [info@sw-motech.com](mailto:info@sw-motech.com)  
 [www.sw-motech.com](http://www.sw-motech.com)

## LEGEND OVERVIEW - READ AND KEEP MOUNTING INSTRUCTIONS!



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:

**[www.sw-motech.com](http://www.sw-motech.com)**



**Do not use thread lock:** Indicates that no liquid thread lock should be used at this point.



**Tighten/note the tightening torque information:**


Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).



**Use thread locker:** Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.

PARTS LIST - READ AND KEEP MOUNTING INSTRUCTIONS!


<p><b>2</b></p>	<p><b>1</b></p>  <p>SBL.01.070.002.11</p> <p> 1/1</p>	<p><b>2</b></p>  <p>M8 x 50; DIN 931 SC.ST.08.050.01.931.088</p> <p> 2/2</p>	<p><b>3</b></p>  <p>ø 8,4; DIN 125 US.ST.084.01.125</p> <p> 2/2</p>	<p><b>4</b></p>  <p>M8; DIN 6927 MU.ST.08.01.6927.08</p> <p> 2/2</p>		
<p><b>5</b></p>	<p><b>5</b></p>  <p>SBL.01.070.901.01.11</p> <p> 1/1</p>	<p><b>6</b></p>  <p>SBL.01.070.902.01.11</p> <p> 1/1</p>	<p><b>7</b></p>  <p>M10 x 80; DIN 931 SC.ST.10.080.01.931.088</p> <p> 2/2</p>	<p><b>8</b></p>  <p>ø 10,5; DIN 125 US.ST.105.01.125</p> <p> 2/4</p>	<p><b>9</b></p>  <p>M10; DIN 6927 MU.ST.10.01.6927.08</p> <p> 2/4</p>	
<p><b>7</b></p>	<p><b>10</b></p>  <p>M10 x 80; DIN 912 SC.ST.10.080.01.912.088</p> <p> 2/2</p>	<p><b>11</b></p>  <p>ø 10,5; DIN 125 US.ST.105.01.125</p> <p> 2/4</p>	<p><b>12</b></p>  <p>M10; DIN 6927 MU.ST.10.01.6927.08</p> <p> 2/4</p>	<p><b>13</b></p>  <p>M12 x 100; DIN 912F SC.ST.12.100.01.912F.088</p> <p> 2/2</p>	<p><b>14</b></p>  <p>ø 13; DIN 125 US.ST.130.01.125</p> <p> 2/2</p>	<p><b>15</b></p>  <p>Ø 20 / ø 12,5 / h 51 DB.ST.0200.0125.0510.02</p> <p> 2/2</p>
<p><b>16</b></p>  <p>M6 x 16; DIN 912 SC.ST.06.016.02.912.088</p> <p> 2/2</p>	<p><b>17</b></p>  <p>M6; DIN 985 MU.ST.06.01.985.08</p> <p> 2/2</p>	<p><b>18</b></p>  <p>M6 x 35; DIN 912 SC.ST.06.035.02.912.088</p> <p> 2/2</p>	<p><b>19</b></p>  <p>Ø 10 / ø 6.4 / 10 DB.ST.100.064.010.01</p> <p> 2/2</p>	<p><b>20</b></p>  <p>ø 6.4; DIN 9021 US.ST.064.02.9021</p> <p> 2/2</p>	<p><b>21</b></p>  <p>M6; DIN 6927 MU.ST.06.02.6927.08</p> <p> 2/2</p>	

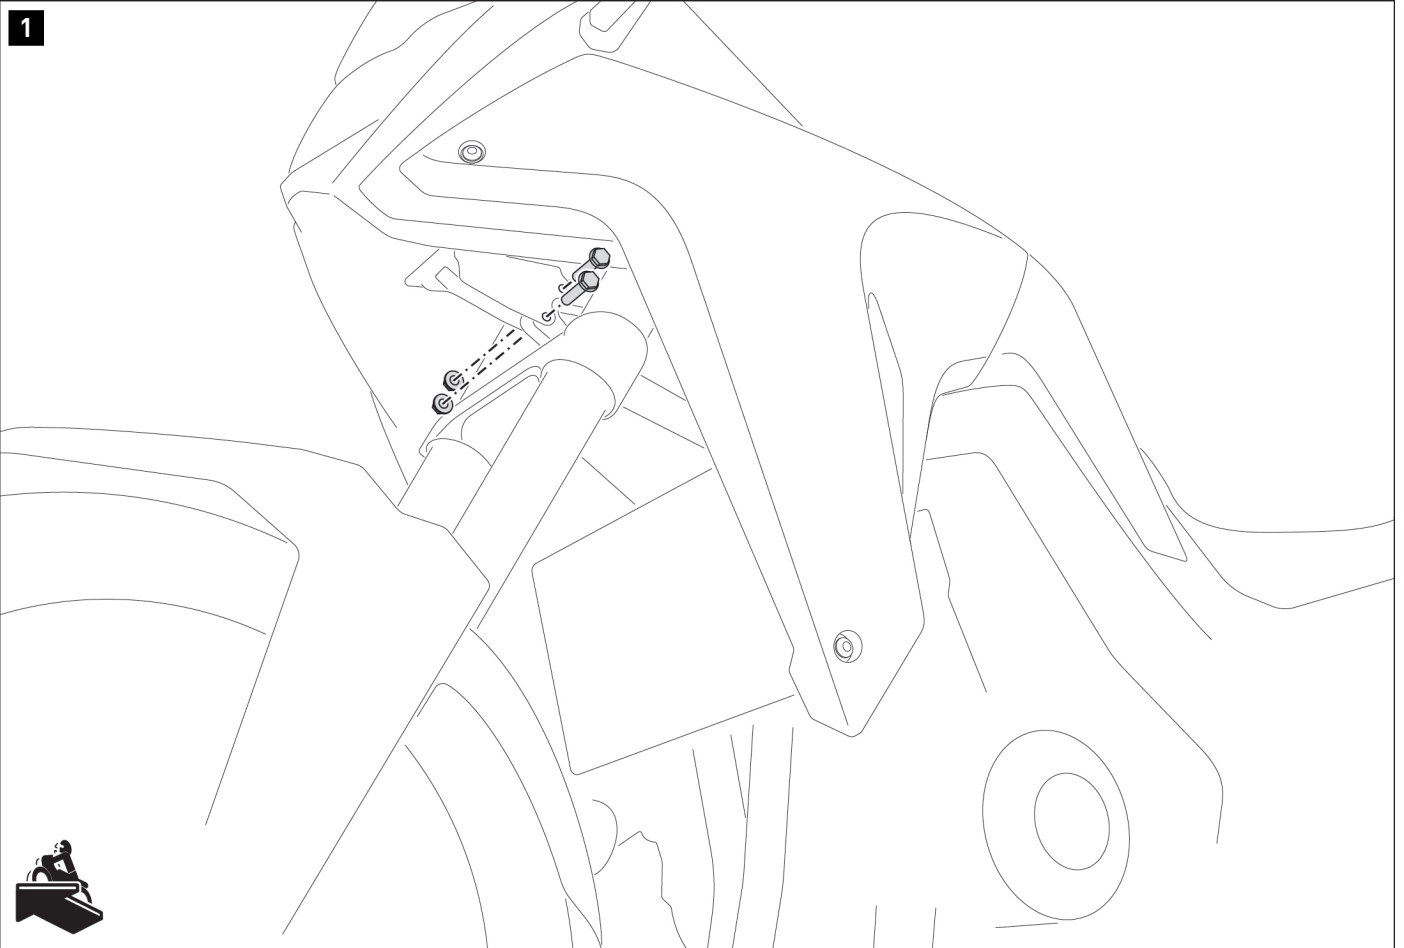





- ▲ WARNING: Always wear eye and hand protection!**
- ▲ WARNING: Always use suitable tools!**


Remove the indicated screws.



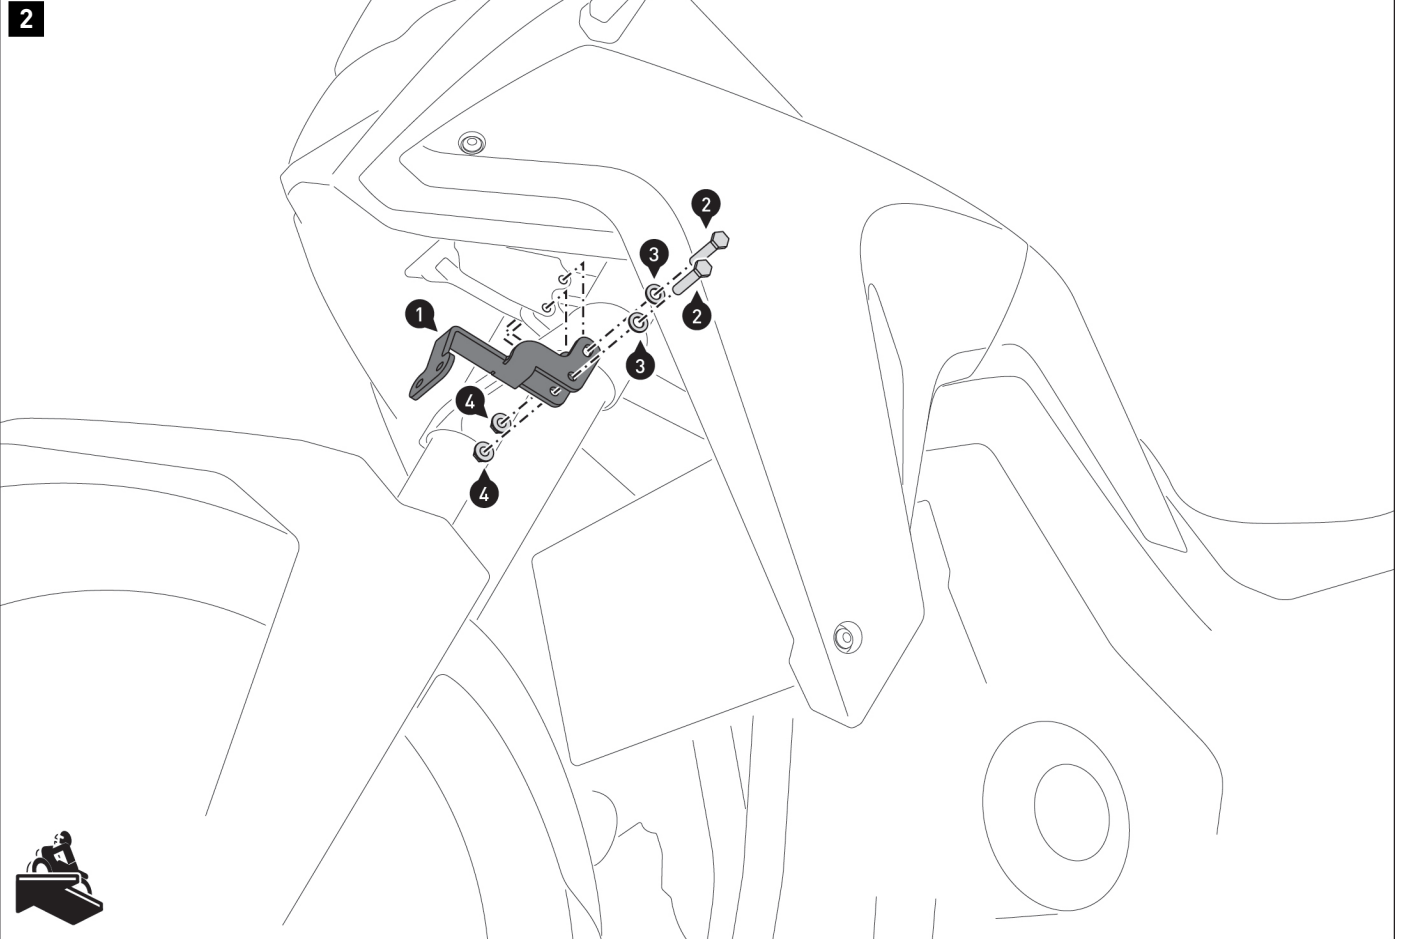

Screw on the mounting bracket (1).  
Tighten the screws as specified.

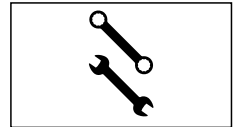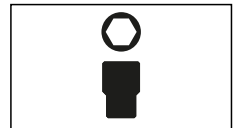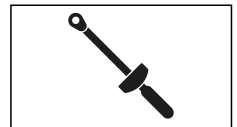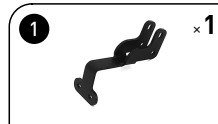

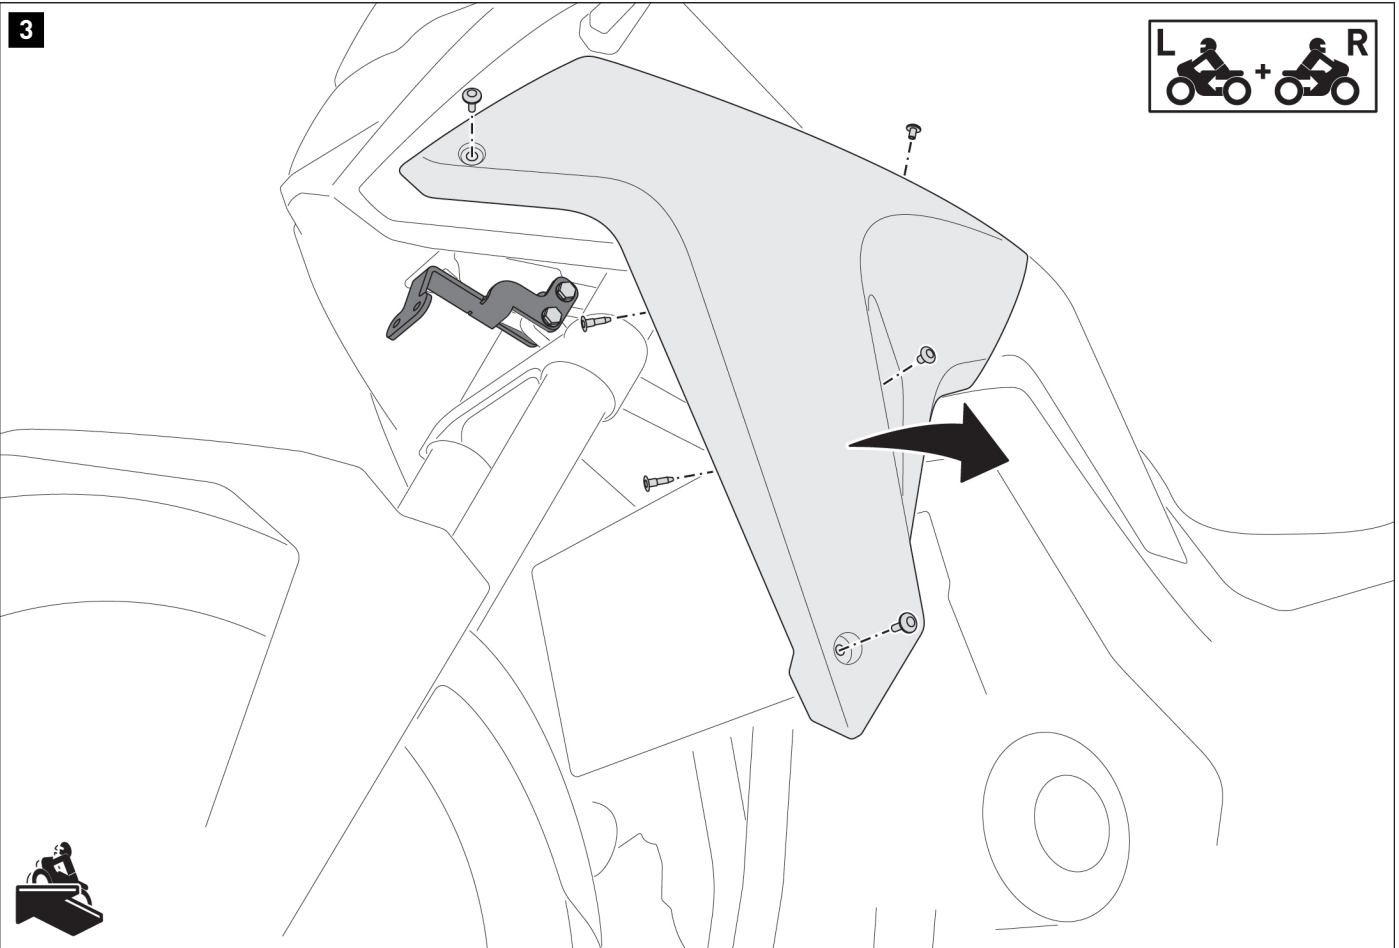


**▲ NOTE:** The following steps indicate how to mount the left crash bar (5).  
Assemble the right crash bar (6) in the same way.

**WARNING:** Do not start assembling the right crash bar until you have finished the left crash bar!


Remove the side panel.


4

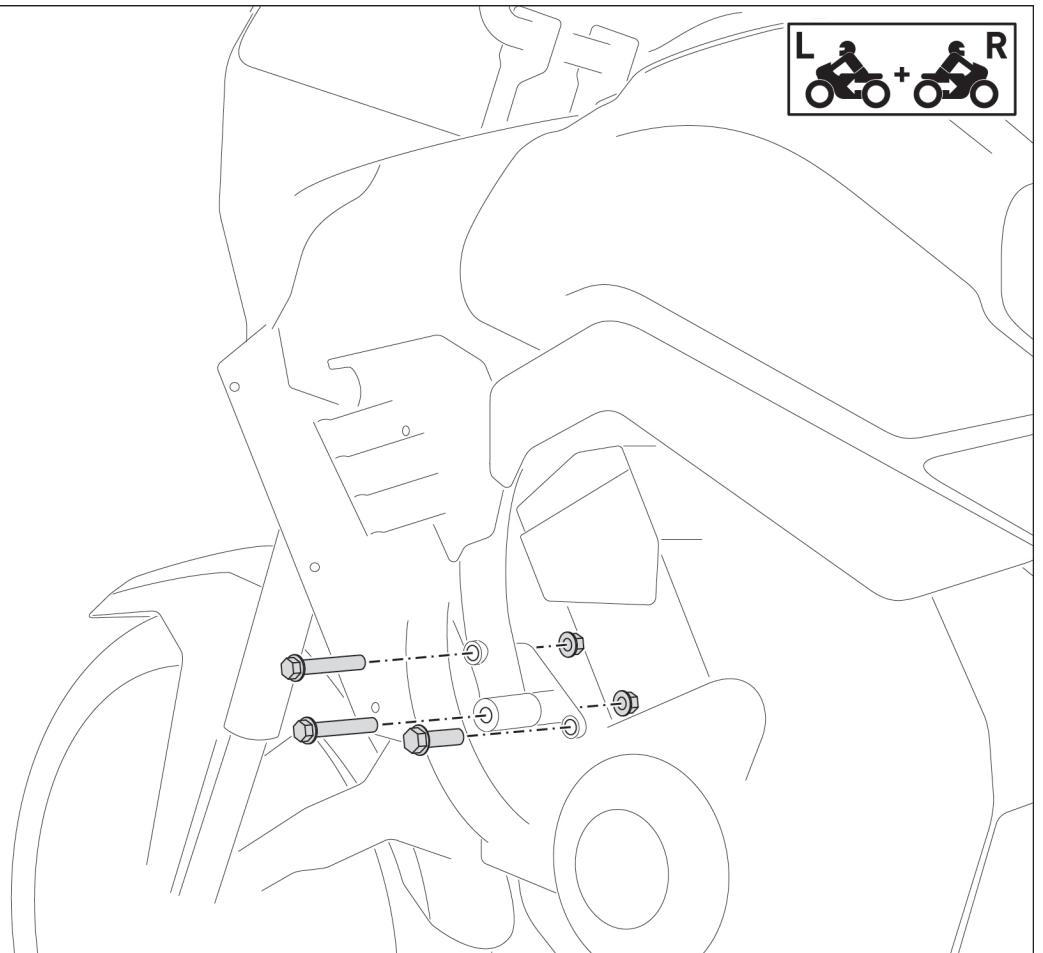







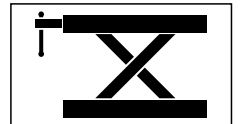**▲ WARNING: Ensure the engine is properly supported using a corresponding jack!**

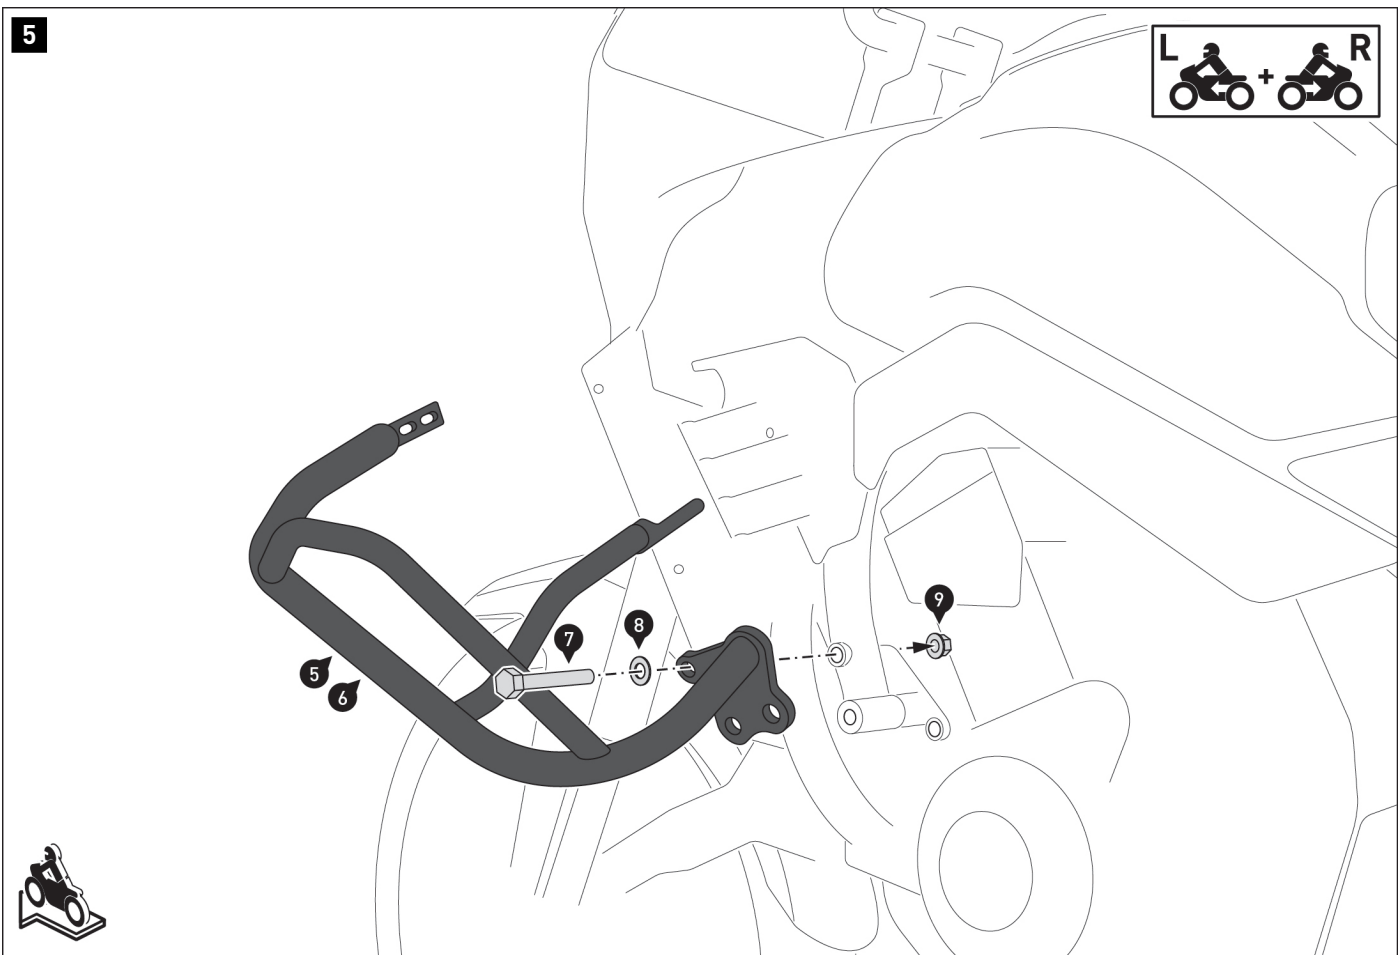
Remove the indicated screws.






**▲ WARNING: Cover the fender to protect it from any accidental scratching!**  
 Screw the crash bar halves (5) and (6) together at the upper attachment point on the vehicle.  
 Do not tighten the screws (7) yet.

-  5 × 1
-  6 × 1
-  7 × 2
-  42 Nm
-  8 × 2
-  9 × 2

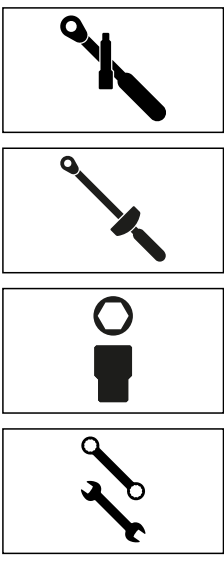






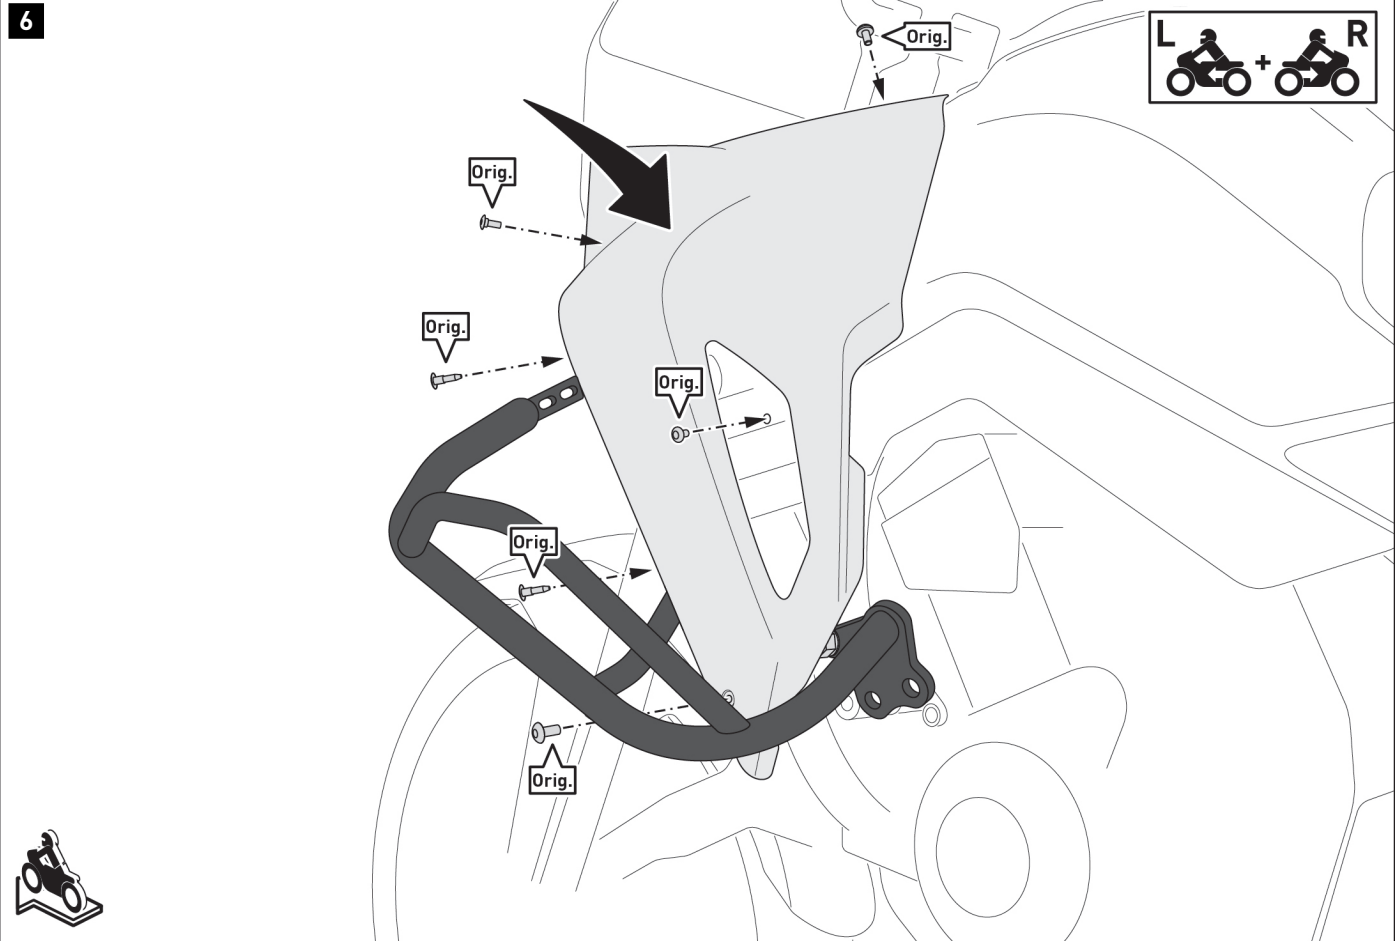

**OPTION [1]:** Mount the side panel in this step. Tighten the original screws (Orig.) according to the manufacturer's instructions.

**OPTION [2]:** Mount the side panel according to step [7] by turning the handlebar left and right.

7

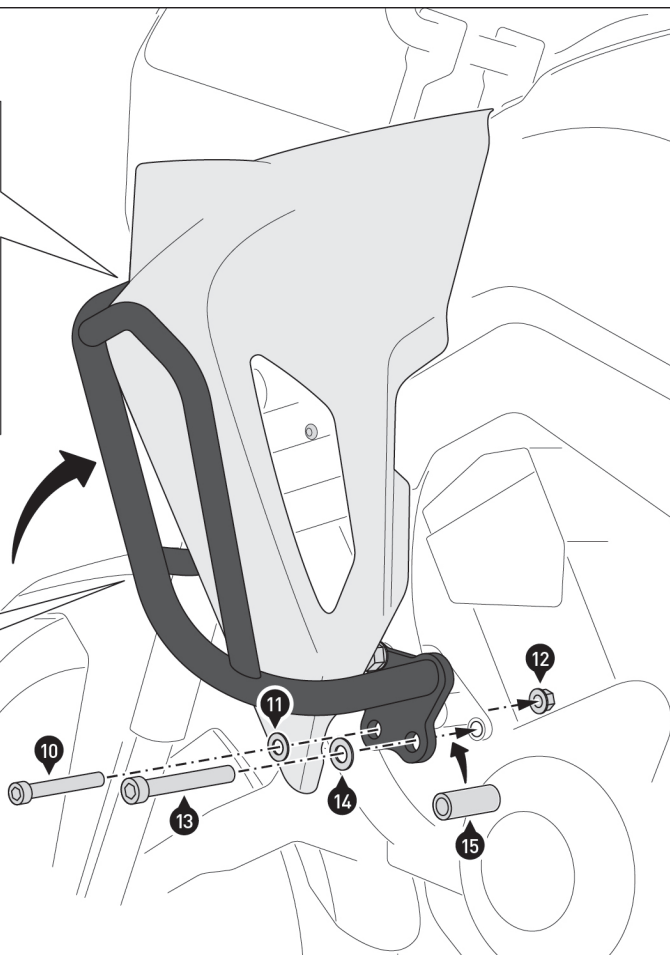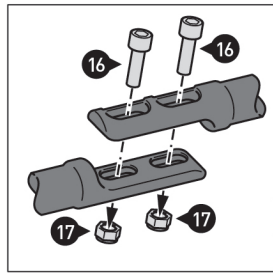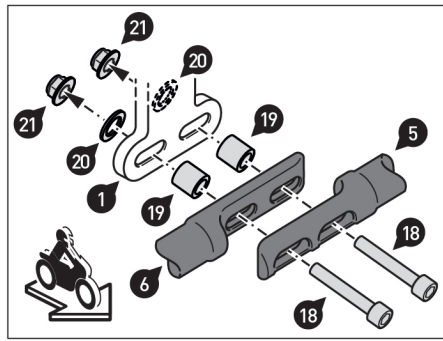


Screw the crash bar halves (5) and (6) to the two remaining attachment points on the vehicle.

**▲ WARNING: Use liquid thread locker (only for screws (13))!**  
Do not tighten the screws yet.

Screw the crash bar halves (5) and (6) to the mounting bracket (1).

Now screw the two crash bar halves (5) and (6) together.

When all components have been loosely attached, tighten screws (10, 16 and 18) as specified in the mounting instructions.  
Tighten the screws (13) according to the manufacturer's instructions.

 ×2  42 Nm	 ×2	
 ×2	 ×2  9.6 Nm	
 ×2	 ×2	
 ×2  M  OEM	 ×2	
 ×2	 ×2	
 ×2		
 ×2  9.6 Nm		

**PRODUCT-SPECIFIC NOTES**

**⚠ WARNING: This product may inhibit cornering and ground clearance in cases of extreme inclination!**

**⚠ NOTE:** Please observe the country-specific regulations for the registration/operation of your vehicle or any applicable TÜV regulations. After installation, parts subject to registration should be entered in the vehicle documents by your test center.