


Item number: **SBL.01.843.10001/B**Revision: **01** • Date: **03 - 2025****Crash bar** ~ 0.75 h.EASY      DIFFICULT

**ENGLISH** Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.

**SAFETY WARNING SYMBOL**

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words **DANGER**, **WARNING** or **CAUTION** are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

**GENERAL INFORMATION**

 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

**PREPARATION:** Read the mounting instructions carefully and make sure that all parts on the parts list are available.

 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

**ASSEMBLY:** All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

**FUNCTIONAL CHECK:** After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



**SW-MOTECH GmbH & Co. KG**  
Ernteweg 7-10  
35282 Rauschenberg  
Germany



 [info@sw-motech.com](mailto:info@sw-motech.com)  
 [www.sw-motech.com](http://www.sw-motech.com)



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:  
**[www.sw-motech.com](http://www.sw-motech.com)**



**Use thread locker:** Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.



**Tighten/note the tightening torque information:** Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).

**PARTS LIST • READ AND KEEP MOUNTING INSTRUCTIONS!**

**3**

1



SBL.00.051.009.03

 2/2


2




SBL.00.051.008.03

 2/2

3



SST.0880.0200.0020.02

 2/2

4



M6 x 20; DIN 912  
SC.ST.06.020.02.912.088

 2/2

**4**

5



SBL.01.843.902.02.11

 1/1

6



SBL.01.843.901.02.11

 1/1

7



Ø 25 / ø 12,5 / h 41  
DB.ST.0250.0125.0410.02

 2/2


8




M8 x 20; ISO 7380  
SC.ST.08.020.02.7380.109


 2/2

9



Ø 20 / ø 8,4 / h 8  
DB.ST.0200.0084.0080.02

 2/2

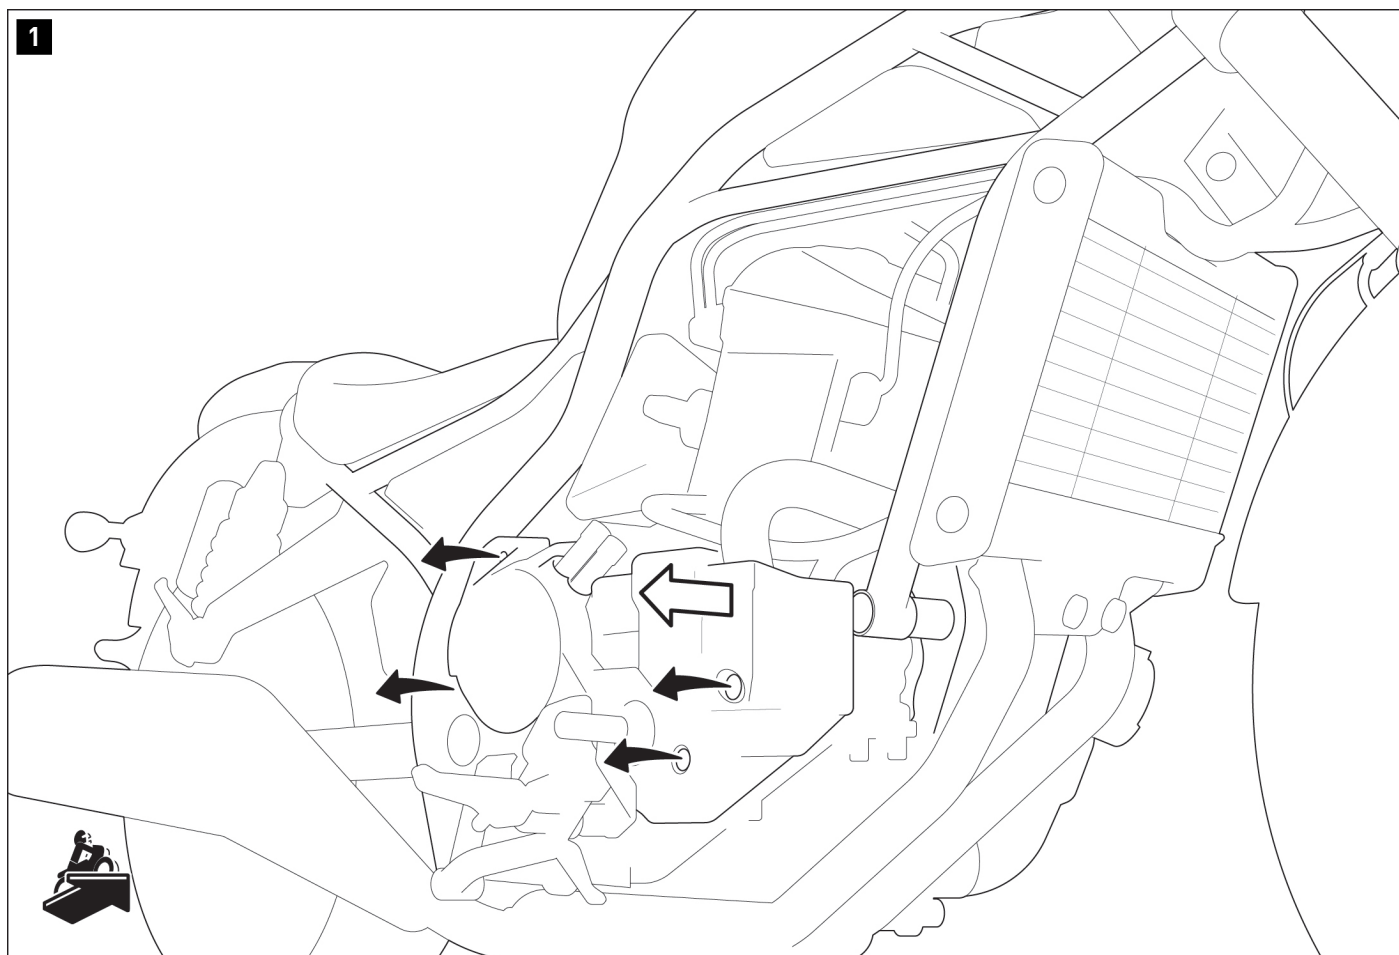


**⚠ WARNING: Always wear eye and hand protection!**


**⚠ WARNING: Always use the proper tools!**

**⚠ WARNING: Ensure the engine is properly supported using a corresponding jack!**


Loosen the screws shown; then push the clutch cover slightly forward to expose the attachment point on the vehicle frame.

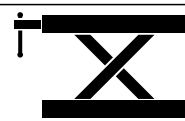

**2**

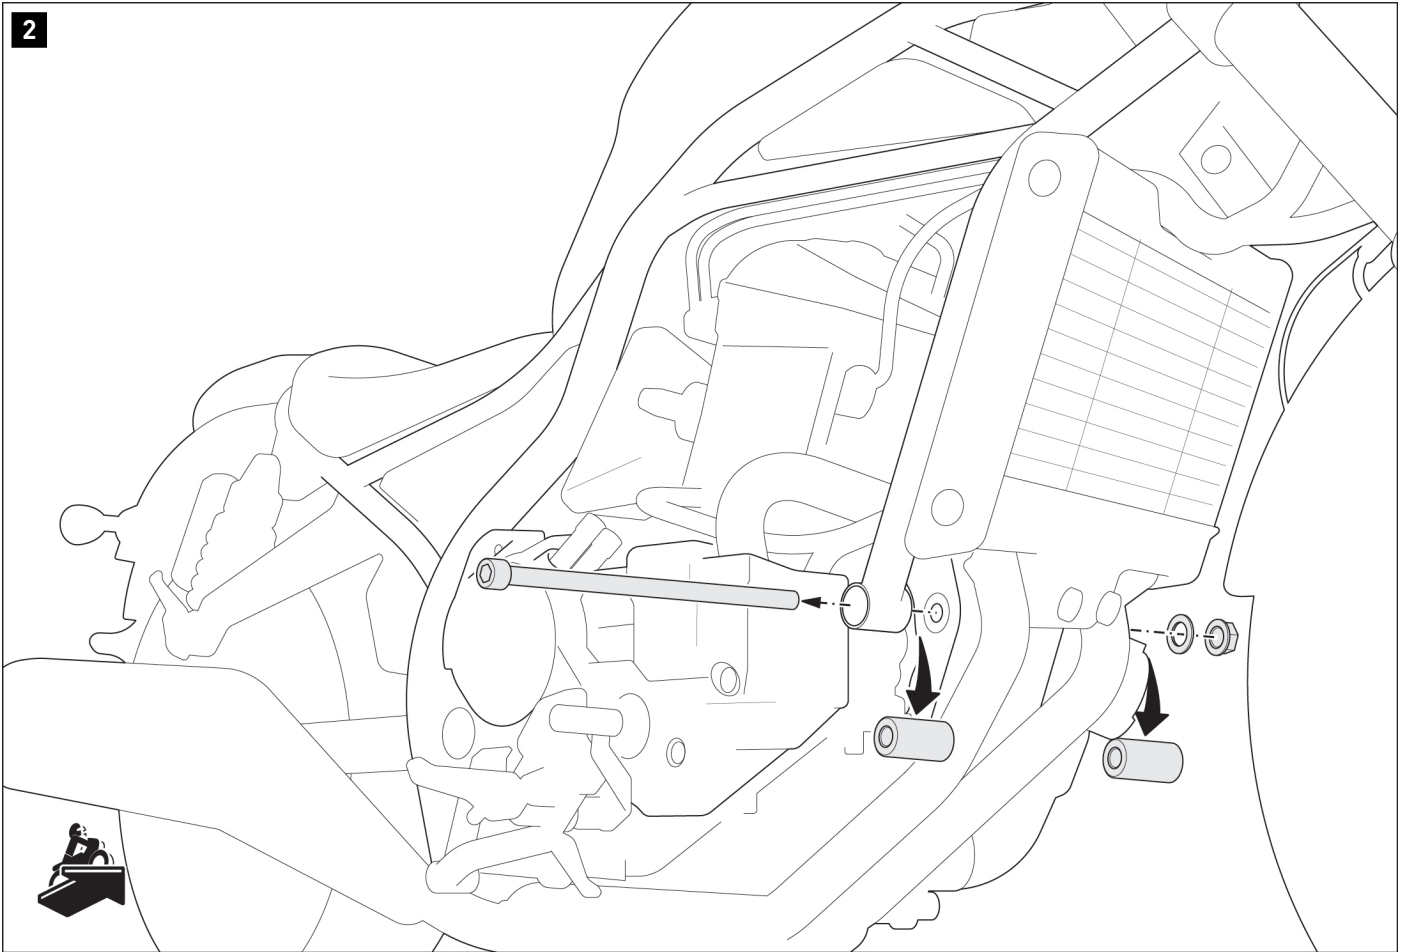


Remove the original parts shown here from the vehicle.

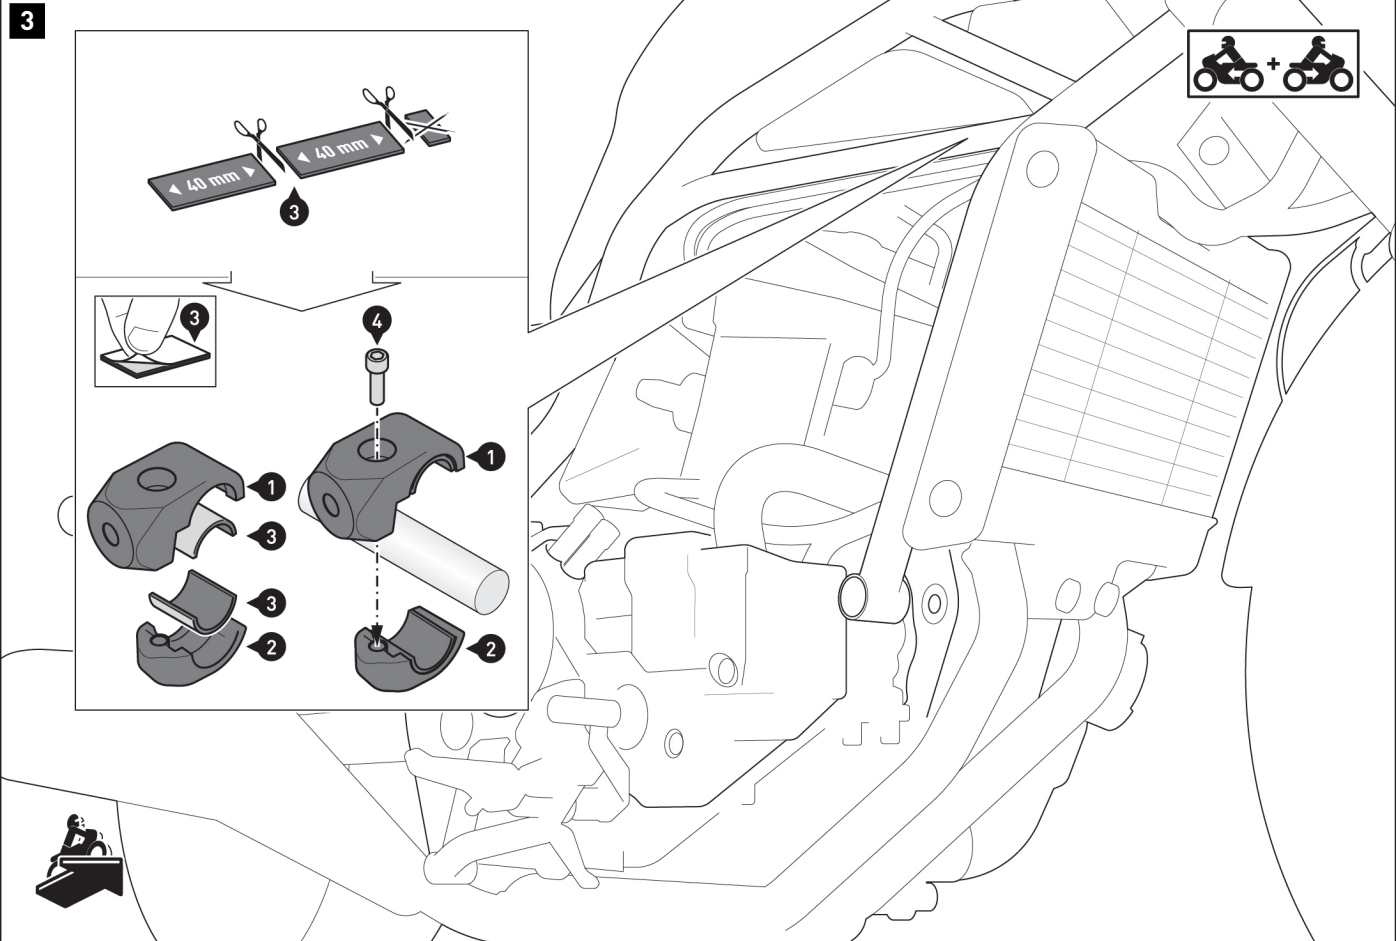



Cut each of the rubber strips [3] into two 40 mm pieces (the rest is no longer required).  
Then glue the rubber strips [3] into the frame clamp halves [1] and [2], as shown in the detail drawing.


Screw the frame clamps [1] onto both sides of the vehicle frame.

**⚠ WARNING: Use a liquid threadlocker!**  
Do not tighten the screws [4] yet.

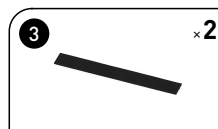

**M** **9.6 Nm**

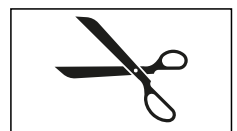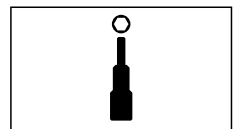

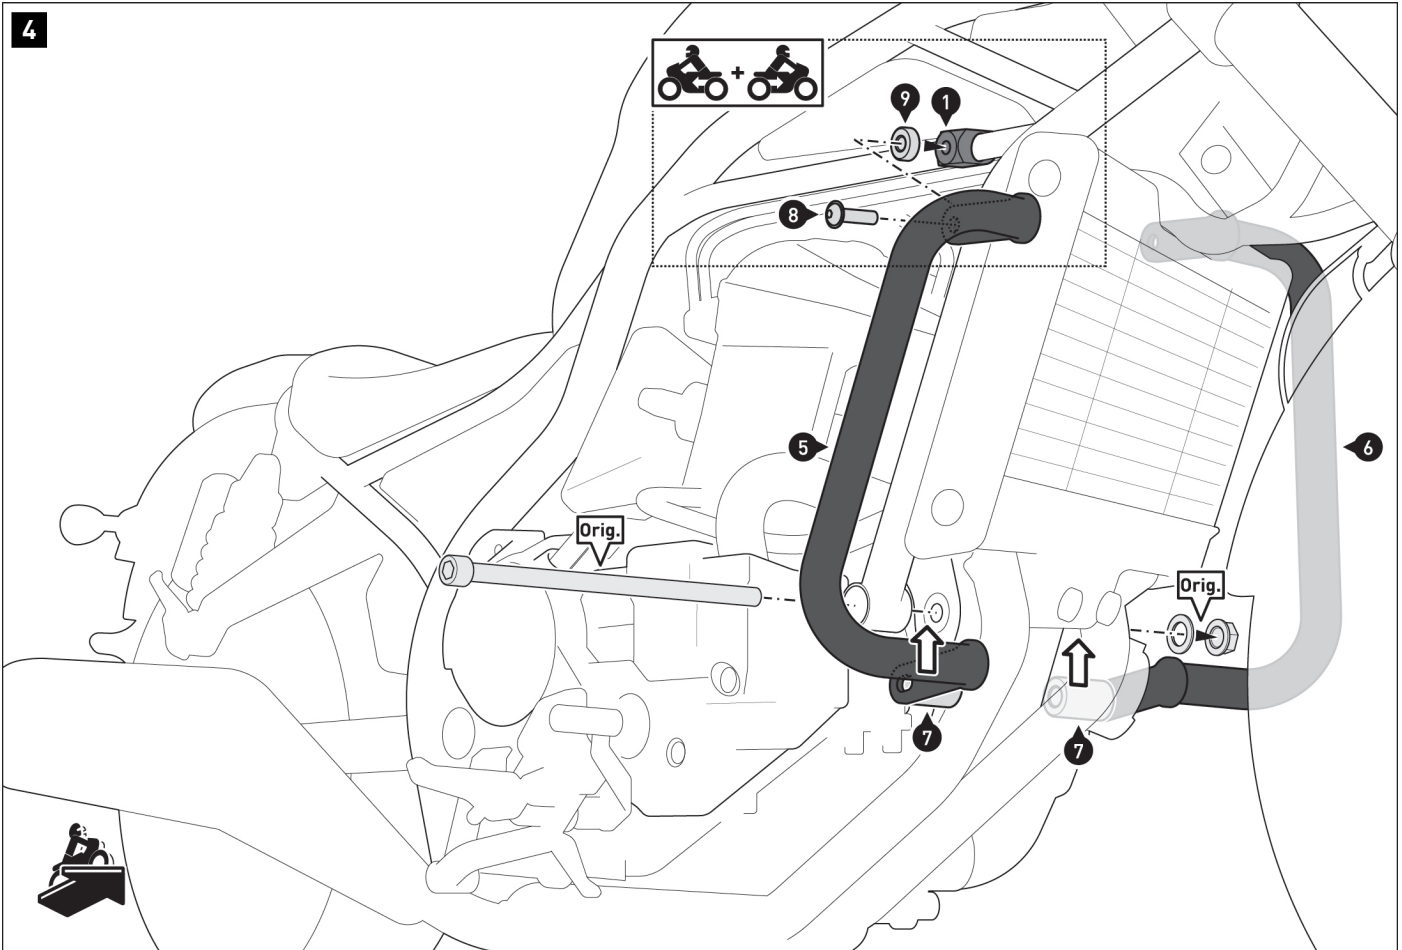

**⚠ DANGER:** For the *Honda CMX 1100 T Rebel* and the *CMX 1100 SE Rebel*, the indicators are attached to the fork bridge! Make **ABSOLUTELY** sure that the indicators do **NOT** make contact with the crash bars (5/6) when the steering lock is fully turned! The full steering lock **MUST** always be maintained! If contact occurs, adjust the frame clamps (1) and crash bars (5/6)!

Screw crash bars (5) and (6) to the frame clamps (1) on both sides.






**⚠ WARNING:** Use liquid thread locker!

Do not tighten the screws (8) yet.


Then screw the crash bars (5) and (6) with the original parts (Orig.) and spacers (7) onto the motorcycle between the vehicle frame and the engine cover.

When all components have been loosely attached, tighten the screws (4) and (8) as specified in the mounting instructions.

Tighten the original screw (Orig.) according to the vehicle manufacturer's specifications.

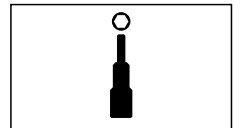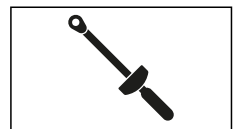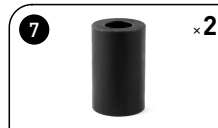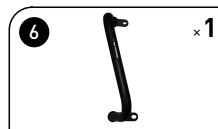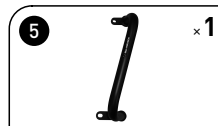

**5**

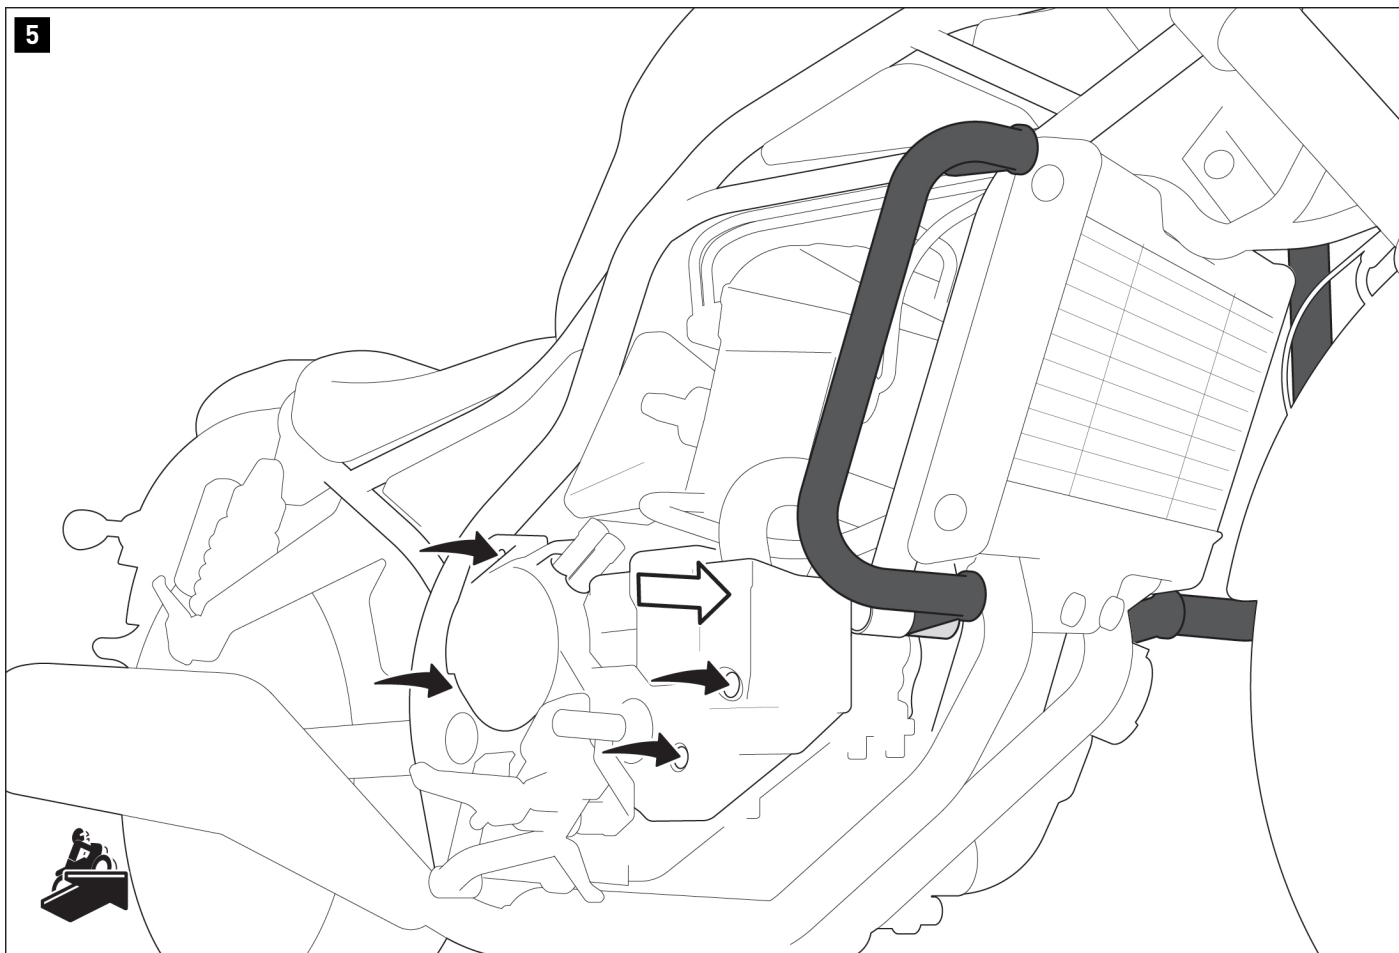

Screw the clutch cover back onto the vehicle.  
Tighten the screws according to the vehicle manufacturer's specifications.

**⚠ DANGER:** Check again that the steering lock is fully engaged!



PRODUCT-SPECIFIC NOTES

**⚠ WARNING:** This product may inhibit cornering and ground clearance in cases of extreme inclination!

**⚠ NOTE:** Please observe the country-specific regulations for the registration/operation of your vehicle or any applicable TÜV regulations. After installation, parts subject to registration should be entered in the vehicle documents by your test center.